



PipeGuard®

ROOFTOP PIPE SUPPORTS

HEIGHT-ADJUSTABLE INSTALLATION INSTRUCTIONS

Place slip sheet or barrier sheet on roofing membrane if required.

Center the PipeGuard under the pipe so that the rollers make direct contact with the pipe.

With a wrench, tighten the Height-Adjustable PipeGuard to the supporting height of the pipe.

Suggested Spacing Placement

- Every 10 ft. for 2-in. pipes or larger
- Every 8 ft. for 1.5-in. pipes
- Every 6 ft. for 1-in. pipes or smaller
- Place a support at every union, junction and source.

Maintenance Suggestion

Semi-annual inspection is required to check pipe stand's position, alignment and weight distribution.

Check to make sure slip sheets are positioned under pipe stand if required.

Check to make sure pipe stand is resting flat on roof surface.