



PowerGrip™

Installation Instructions


ROOF MOUNT SYSTEM

Only technicians trained in single-ply roof installation should install this product.

Always check with roof system manufacturer for installation criteria and written acceptance of the intended application prior to installation. Failure to do so could void the roof warranty.




153 Bowles Road
Agawam, MA 01001 USA
800-633-3800 | 413-789-0252
www.OMGRoofing.com

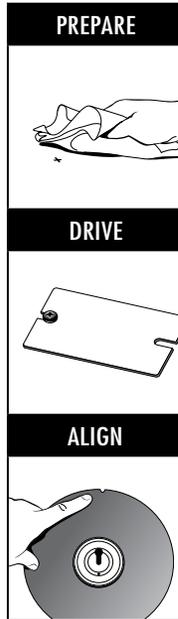

1. Mark location where PowerGrip is to be installed. Prepare membrane surface at each location following roof system manufacturer's requirements.

2. Install recommended fastener through the roof and deck following system manufacturer's specifications using the depth gauge provided, and allowing the fastener head to sit firmly on the gauge card. Do not overdrive.

3. Locate the notch on the perimeter of the PowerGrip flange and note how it aligns with the plate on the underside of the PowerGrip.

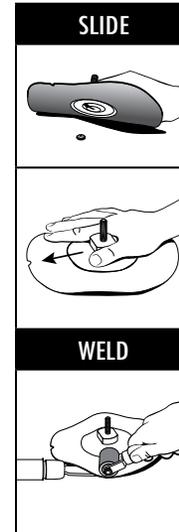

4. Slide the assembly over the head of the fastener to position the PowerGrip in the proper location.

5. Heat weld the flange of the PowerGrip to the system manufacturer's specifications and seal cut edges as required.

For EPDM applications: Prime the existing EPDM where the PowerGrip tape is to be installed per the manufacturer's requirements for priming taped seams. Once PowerGrip has been slid onto screw head, begin to remove two sided tape and roll into place immediately. Complete installation by following EPDM manufacturers cut edge requirements.

*Based on technology from EcoFasten Solar.
U.S. Patent No. 8,683,751.*