


# BeadPro - Hoses Assembly Instructions

Please read and understand all instructions



**1- Install Hoses into the correct hose holders on the BeadBar, depending on the spacing. Use four hose holders for 12-inch on center and seven hose holders for six-inch on center. The hose will extend through the bottom of the BeadBar 1-in.**

**2- Very Important** - Connect secondary mixing nozzle to mixing tip, push to third rib. **Make sure final seating position of Quick Connect is at 3rd Rib.**

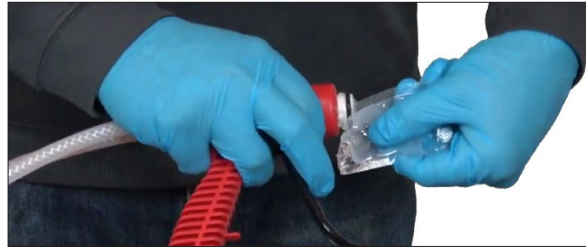

**3- Very Important** - Apply grease to black rubber O-ring on the applicator.

**4- Slide mixing tip and hose up through the bottom of the applicator holster.**



**5- Connect adhesive applicator to mixing tip with a quarter turn. Place applicator in holster.**

**You are now ready to apply adhesive.**