



PowerGrip™ Plus

ROOF MOUNT
SYSTEM


Installation Instructions

Only technicians trained in single-ply roof installation should install this product.


Always check with roof system manufacturer for installation criteria and written acceptance of the intended application prior to installation. Failure to do so could **void the roof warranty.**



153 Bowles Road
Agawam, MA 01001 USA
800-633-3800 | 413-789-0252
www.OMGRoofing.com

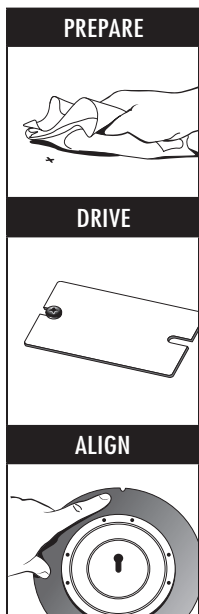

1. Mark location where PowerGrip Plus is to be installed. Prepare membrane surface at each location following roof system manufacturers' requirements.
2. Install recommended fastener through the roof and deck (min. deck penetration $\frac{3}{4}$ -in. for steel, 1-in. for wood) using the depth gauge provided, and allowing the fastener head to sit firmly on the gauge card. Do not overdrive.
3. Locate the notch on the perimeter of the PowerGrip Plus flange and note how it aligns with the plate on the underside of the PowerGrip.

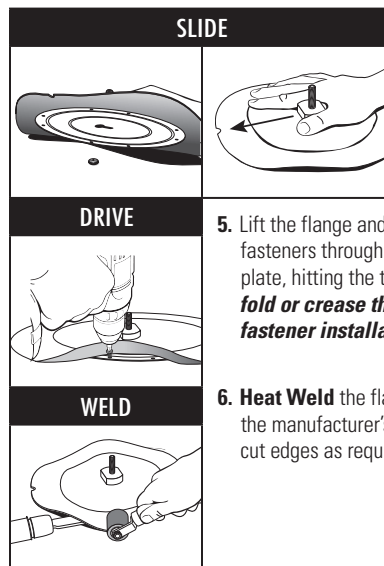

4. Slide the PowerGrip Plus into place over the head of the fastener.
5. Lift the flange and install eight additional fasteners through the PowerGrip Plus plate, hitting the top flutes. **Do not fold or crease the membrane during fastener installation.**
6. **Heat Weld** the flange of the PowerGrip to the manufacturer's specifications and seal cut edges as required.

*Based on technology from EcoFasten Solar.
U.S. Patent No. 8,683,751.*

BUR/Mod Bit: See back for instructions.

RM1008 Rev. 02072019